


PRIZM WIRING HARNESS

SECTOR SEVEN
by PRO MOTO BILLET

Please read instructions carefully before installation. If you have any questions or concerns, please feel free to contact us at **866-466-4762**. If you do not feel comfortable with the installation, we recommend having a professional install the product.

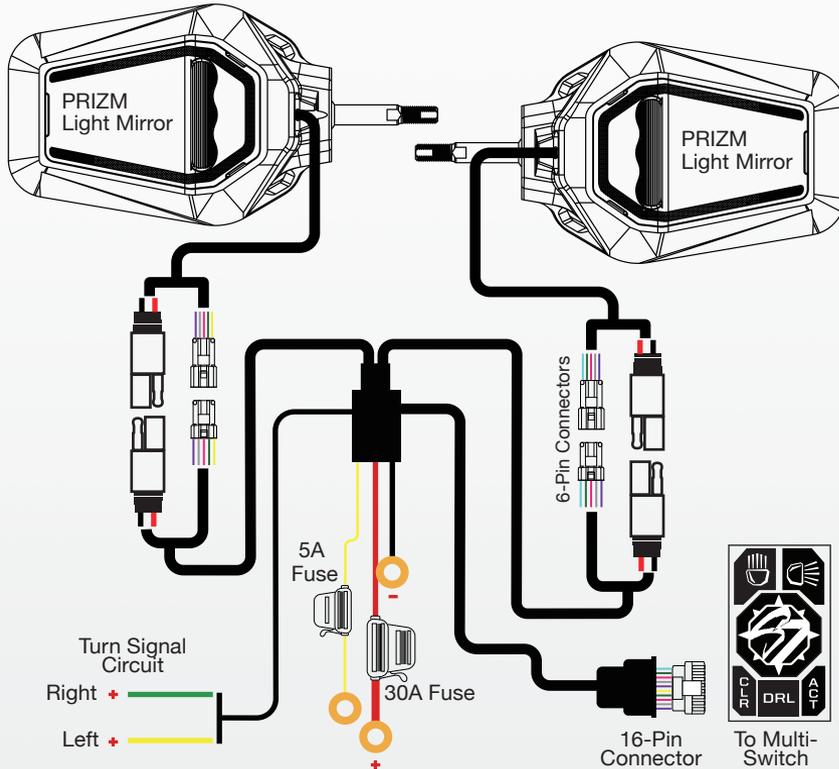

INSTALLATION:

- Step 1** Connect the PRIZM Light Mirror wires to the matching wiring harness terminals respectively; black to black and red to red. Attach both 6-Pin Connectors.
- Step 2** Feed the Multi-Switch wiring from inside dash through switch cutout/opening in dash. Connect the 16-Pin Connector to the back of the Multi-Switch. Fasten Rubber Boot over 16-Pin Connector. Place Multi-Switch into Rocker Switch opening.
- Step 3** Optional Turn Signal Circuit: Attach Green (Right Signal) and Yellow (Left Signal) Wires to an existing Turn Signal Kit. A powered Rocker Switch or a Switch Panel/Controller could be used as well. 12V power activates sequencing.
- Step 4** Connect the wiring harness to car battery: red wire (+) with fuse to positive, black wire (-) to negative, yellow wire to switched accessory power. See supplied Ring Terminals if needed. PRIZM Accent/DRL Lights will illuminate in a start-up sequence when power is supplied.

CAUTION:

Pulse Power Plug may be used for Accessory/Switched Power (Yellow Wire) Only. Plug can not be used for main 12V power (+) or Ground (-), as the plug is not rated for the amperage draw.

Please make sure any exposed wires are securely wrapped by electrical insulating tape to prevent short circuit.

PRIZM MULTI-SWITCH

SECTOR SEVEN
by PROMOTOBILLET

QUICK GUIDE MULTI-FUNCTION SWITCH

FORWARD
LIGHTING
ON/OFF

LONG PRESS
FOR LOW
BEAM

SIDE
LIGHTING
ON/OFF

LONG PRESS
FOR LOW
BEAM

FORWARD
& SIDE
ON/OFF

LONG PRESS
FOR LOW
BEAM



DRL
COLOR
CHANGE

LONG PRESS
FOR STROBE
MODE

DRL LIGHTING
ON/OFF

LONG PRESS FOR
SWITCH BACKLIGHT DIM

DRL
ACTION
CHANGE

LONG PRESS
FOR SOS
MODE

ALERT/EMERGENCY BUTTON FUNCTIONS



STROBE

LONG PRESS
FOR STROBING



SOS

LONG PRESS FOR
FLASHING
SOS MORSE CODE

ADDITIONAL FEATURES

60-MINUTE PARTY MODE:
Your PRIZMs will have access to power for 60 minutes after turning keyed power off. This allows the Forward/Side Lighting or DRL/Accent lights to be used without Keyed power for up to 60 Minutes.

HAZARD LIGHTING:
When both the Right and Left Turn Signal Circuits are activated simultaneously, the PRIZM Light Mirrors feature an Amber colored Hazard lighted sequence action.

Contact us:



866-466-4762



info@promotobillet.com



@sectorseven.zone



www.sectorseven.zone